



## Make a difference

### DIGITAL MULTIFUNCTION METER

User Manual

MT-DP96MF



Version 1.0

Thanks for choosing our product – MT-DP96MF, Please read this manual carefully and pay attention to below caution matters.

## CAUTION

- ✓ This product should be installed and maintained by professional person
- ✓ Before operating this product inside or outside, please cut off the input signal and power supply;
- ✓ Please make sure all parts of the product don't have voltage by suitable voltage detection device
- ✓ The power supply should be within the rated range

The below situation will result in device damage and abnormal working

- ✗ Auxilliary power source voltage over range
- ✗ Distribute system frequence over range
- ✗ Current, voltage input polarity incorrect
- ✗ Disconnect the communication plug under charged situation
- ✗ No according requirement to connect terminal



Please don't touch the terminals when the meter is in operation!

## **CONTENTS**

1. Function introduction.....	4
2. Technical parameter.....	5
3. Installation and correction.....	6-7
4. Display and buttons.....	8-13
5. Programme operation.....	13-16


## 1. Function introduce

Measure function	Remark
Realtime measure	Three phase voltage (L-L, L-N)
	Three phase current and neutral current
	System Frecuence
	P, Q, S, PF (per phase & total)
Electric energy	KWh import
	KVARh import
	KWh export, KVARh export
Communication	RS485 Port MODBUS-RTU
Maximum Demand/	U,I,P,Q
Analog output/	0-20mA/ 4-20mA/ 0-5V/ 0-10V
Digital input/	Dry contact type/
Relay output/	AC250V 5A Remote/ Alarm
Display type/	LCD


## 2. Technical parameter

		Parameter
Signal Input/	Connection system	3P3W/ 3P4W
	Voltage	Measurement range: 519V L-L Over load: Continous: 1.2 Vn; Instantaneous: 2Vn Power consumption: < 1VA
	Current	Measurement range: 5A/ 1A Over load: Continous: 1.2In; Instantaneous: 2In Power consumption: < 1VA
	Frequence	45 - 65Hz
	Auxiliary power suply	AC85-265V DC100-300V
	Communication	RS485 communication port, physical layer isolation. According international standard MODBUS-RTU agreement. Communication speed 1200-38400 (Default 9600) Test type N81, E81, 081 (Default N81)
	Analog output	0-20mA/ 4-20mA/ 0-5V/ 0-10V
Relay output		Programme remote/ Alarm switching ouput Capacity 5A at 250VAC/ 30VDC
Digital input		Remote switch input signal, dry contact input. Program relate alarm output
Measure class		Current, Voltage: 0.5S Frequency: ±0.1Hz Active power: 0.5S Reactive power: 1S Energy: 0.5S
IP protection		IP53 for indoor type and PI65 for outdoor type
Evernionment		Working temperature: -10÷55°C Store temperature: -20÷75°C Relative Humidity:<80%RH
Safe		Isolation: Signal, auxiliary power suply, output terminal crust resistance >5MΩ and withstand voltage pulse >AC2KV

### 3. Installation and correction

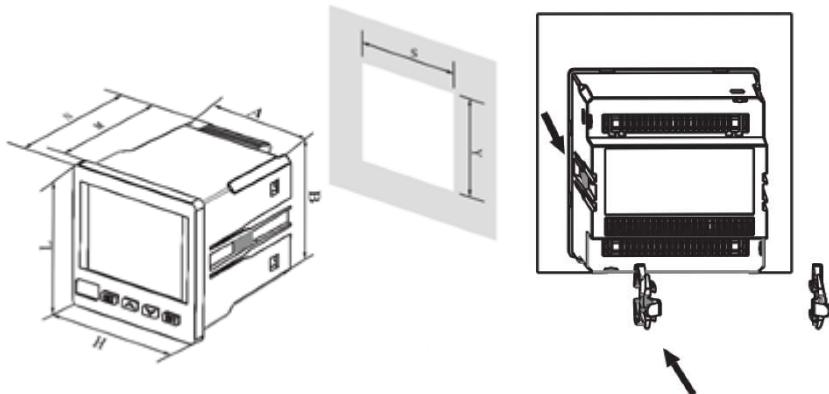


LxH (mm)	AxB (mm)	SxY (mm)	SxY (mm) IP65	N (mm)	M (mm)
96x96	90.5x90.5	91x91	91.5x91.5	94	88

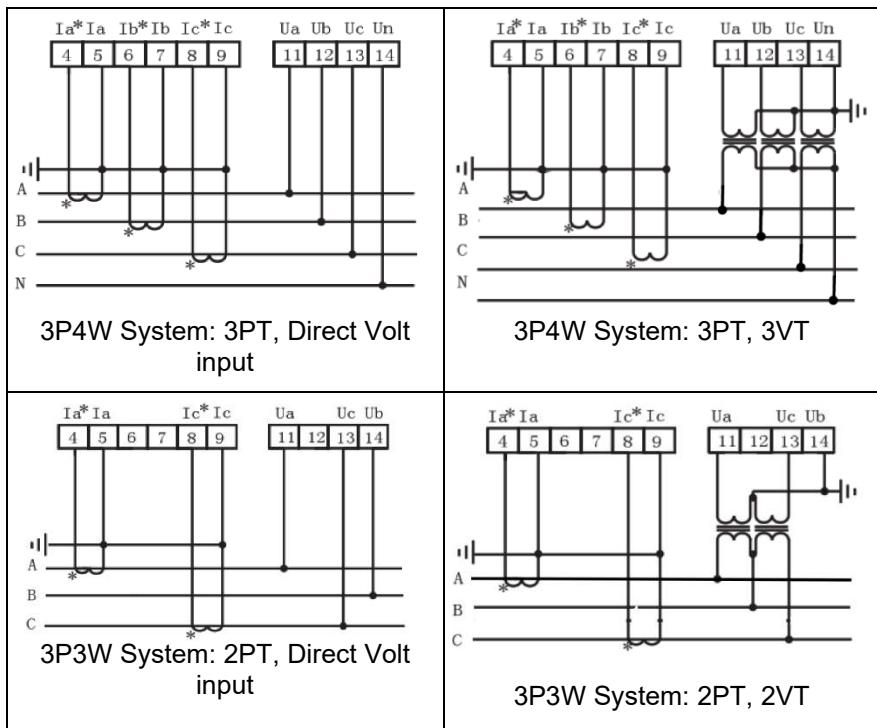


Active Pulse		Reactive Pulse			RS485			Aux. Power Suply	
Ep-	Ep+	Ep-	Ep+		B	A		N(V-)	L(V+)
48	47	50	49		59	58		2	1

Relay Output					Digital input				Analog output								
DO1	DO2	DO3	DO4	COM	DI1	DI2	DI3	DI4	A0-	A01+	A02+	A03+	A04+				
15	16	17	18	19	20	21	22	70	71	72	73	74	30	31	32	33	34

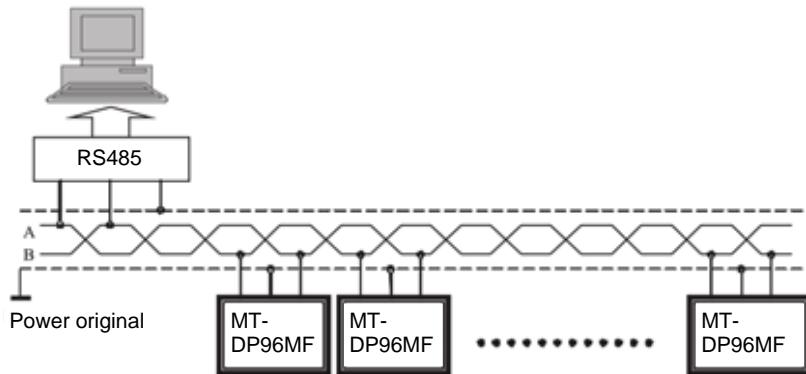

#### 4. Display & Buttons

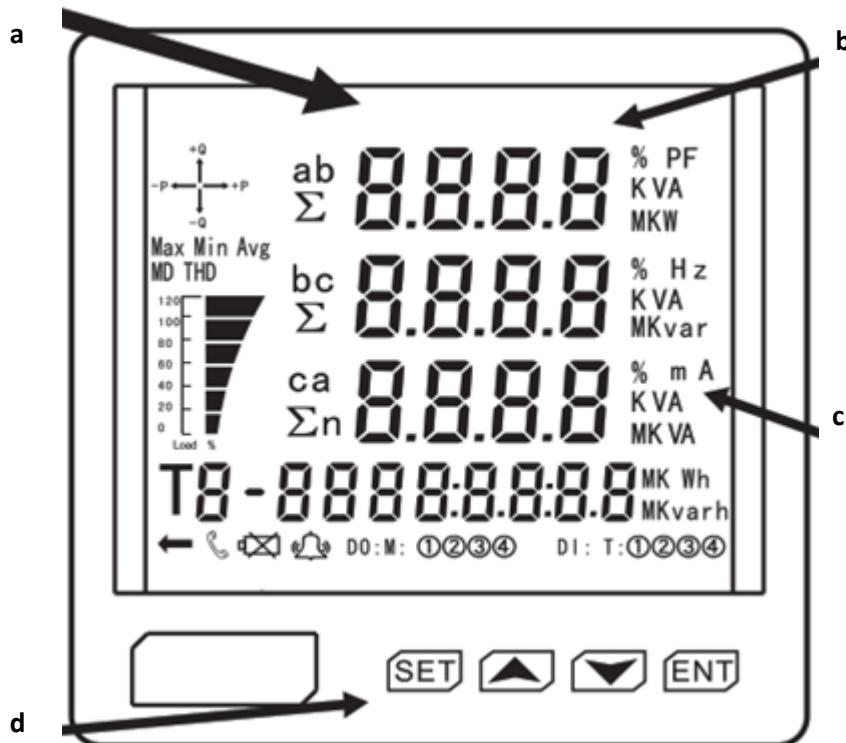

- Four lines digital display measure information: Three phase voltage, three phase current, active power, reactive power, power factor, frequency, switch input, output, other switch input, two way active power, two way reactive power, analog input, demand
- K is light mean practice value is display value is 1.000 times. M is light mean practice value is display value is 1.000.000 times
- Measure item unit or characterise: three phase voltage V, three phase current A, active power W, reactive power VAR...
- Buttons use in change or programme set:



is change page button or value increase or decrease button





is enter programme status



is select confirm button

If there is no relative symbol display or the set data not working, It means the product without the relative function

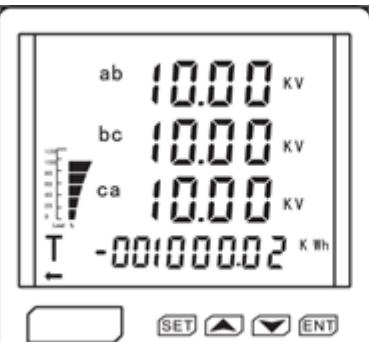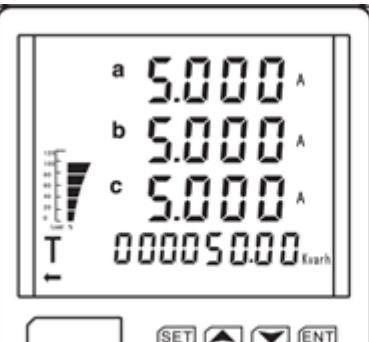Board	Content	Explain
DISP=1 -Three phase voltage -Forward active energy Kwh		Separate display voltage $U_a$ , $U_b$ , $U_c$ (in the 3P4W)  In left fig. $U_a = 5774V$ $U_b = 5774V$ $U_c = 5774V$  Forward active energy = 2908.05KWh
DISP=2 -Three phase voltage -Reverse active energy Kwh		Separate display voltage $U_{ab}$ , $U_{bc}$ , $U_{ca}$ (in the 3P4W)  In left fig. $U_{ab} = 10KV$ $U_{bc} = 10KV$ $U_{ca} = 10KV$  Reverse active energy = 1000.02Kwh
DISP=3 -Three phase current -Forward reactive energy Kvarh		Separate display current $I_a$ , $I_b$ , $I_c$ (in the 3P4W)  In left fig. $I_a = 5A$ $I_b = 5A$ $I_c = 5A$  Forward reactive energy = 50Kvarh

DISP=4

- Total active power
- Total reactive power
- Total apparent power



Total active power = 86.6KW

Total reactive power = 0000Kvar

Total apparent power = 86.6KVA

Reverse reactive energy = 100.08Kvarh

DISP=5

- Active power phase A
- Reactive power phase A
- Apparent power phase A



Active power of phase A = 28.87KW

Reactive power of phase A = 0000Kvar

Apparent power of phase A = 28.87KVA

Forward active energy = 2908.05KWh

DISP=6

- Active power phase B
- Reactive power phase B
- Apparent power phase B



Active power of phase B = 28.87KW

Reactive power of phase B = 0000Kvar

Apparent power of phase B = 28.87KVA

Reverse active energy = 1000.02KWh

DISP=7

- Active power phase C
- Reactive power phase C
- Apparent power phase C



Active power of phase C = 28.87KW


Reactive power of phase C = 0000Kvar

Apparent power of phaseCB =28.87KVA

Forward reactive energy =50.00KVARh

DISP=8

- Average current
- Zero sequence current

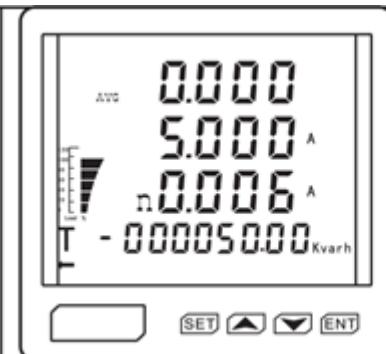

Average current = 5A

Zero sequence current = 0.06A

Reverse reactive energy =50.00KVARh

DISP=9

- Three phase total power factor
- Frequency
- Voltage unbalance






Three phase total power factor =1.000

Frequence = 50Hz

Voltage unbalancedness = 9V

Forward active energy =2908.05KWh

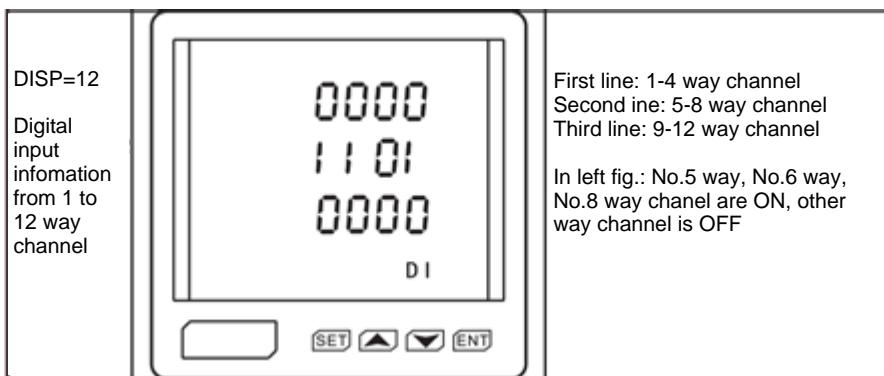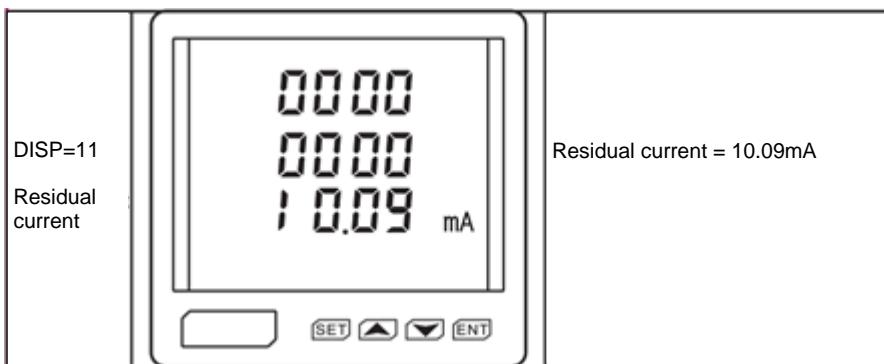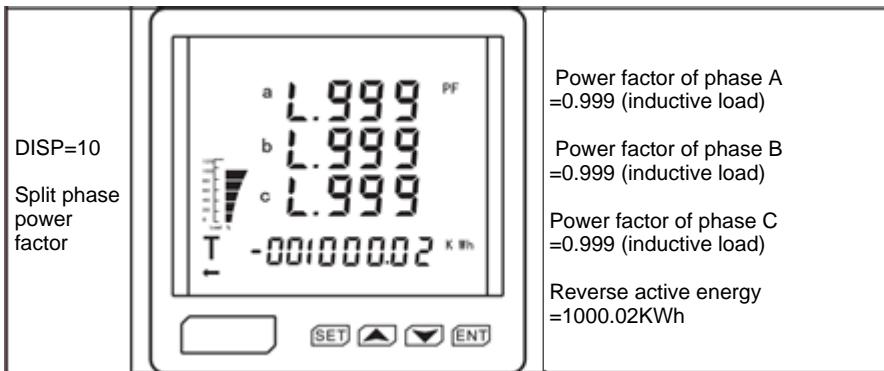

DISP=13 Digital output information from 1 to 4 way channel	 <p>0000 1011 0000 DO</p> <p>SET ▲ ▼ ENT</p>	First line: 1-4 way channel Second line: 5-8 way channel Third line: 9-12 way channel  In left fig.: No.1 way, No.3 way, No.4 way channel are ON, No.2 way channel is OFF
---	--	---

## 5. Programme operation

In programme status, digital interface adopt layers structure menu type, meter supply three lines number display (see fig. 5)



Fig.5

No.1 line is first layer menu information;

No.2 line is second layer menu information;

No.3 line is third layer menu information;

Exp: The fig.5 shown: No.1 layer: INPT = Signal input; No.2 layer: CT = current transformer; No.3 layer: current value is 5, It means ratio of CT is 25/5A.

The digital display interface menu has the following organizational structure, the user can choose the appropriate setting parameters according to the actual situation.

No.1 Layer	No.2 Layer	No.3 Layer	Description
System SET	Display DISP	0000-0017	0000 mean automatic cycling display. Each board connect see table 6
	DISL	0001-0003 or 0000-0120	0000-0120 is keeping time of LCD back light. 0000 means the backlight keeping ON
	Data clear CLR. E	1111	1111 means the data clear other value is invalid

Signal Input  INPT	Wiring type Net	0000 or other value	0000 mean 3P4W system. Other value is mean 3P3W system
	Voltage trans. ratio PT	1~9999	PT value= PT primary value/ secondary value
	Current trans. ratio PT	1~9999	CT value= CT primary value/ secondary value


Communication Set  CON i (i is 1~ 2)	Address SN	1~247	Meter address range 1 to 247
	Communication speed BAUD	0001~0004	0001 is 1200; 0002 is 2400; 0003 is 4800; 0004 is 9600; 00005 is 9200; 00006 is 38400
	Data format DATA	0001~0003	0000 is E,8, 1; 0001 is 0,8,1; 0002 is N,8,1


Digital output Set  DO-i (i is 1~4)	Choose alarm item or close alarm	Set alarm item's specific threshold value	Choose alarm item, and set relative threshold value (when alarm item is digital value, no need set threshold value), once meet alarm condition, switch output working
--	----------------------------------	---	---

Analog output Set  A0-i (i is 1~4)	Choosen transmitter item or close analog output (refer to 8.2 analog output)	Set the full scale value of analog item	Choose transmitter item's and relative electrical parameter (0-20mA, 4-20mA, 4-12-20mA) For example, set "A0-1" TYPE"0135" UAL"5000", which means A phase current 0-5A corresponds to the transmitter output signal of first loop 4-20mA
---	--	---	--

Note: The above menu is applied to the product with complete functions. If you find there is no such menu in the product or the menu is not working, It means the product not supporting the function.

Hold SET button in 3 seconds

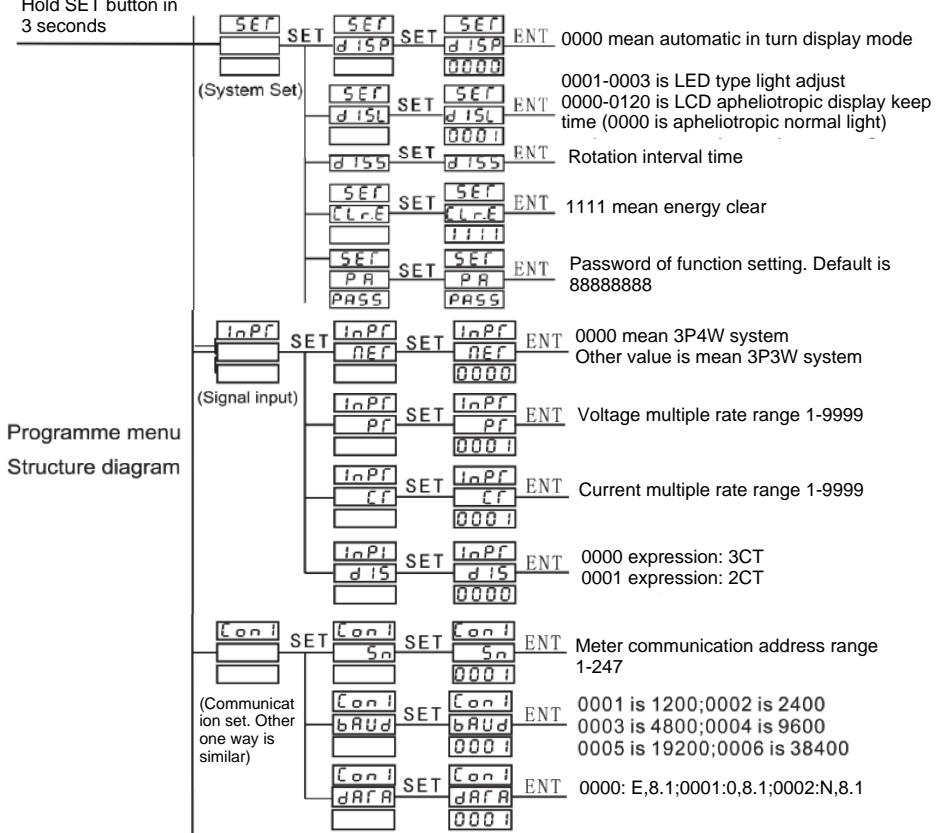

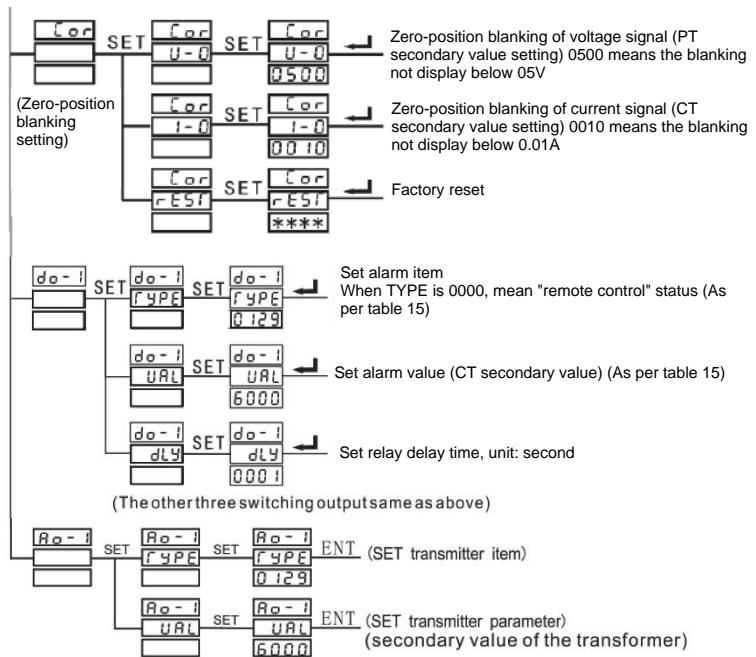

(Analog capacity output: other three ways is similar)